

# LED States



| Function                           | Color | Action   |
|------------------------------------|-------|--|
| Powered Off                        | ▶     |  |
| Fully Charged                      | ▶     |  |
| Charging                           | ▶     | Two Flash  |
| Ready                              | ▶     |  |
| Booting/Shutting Down [Vibe]       | ▶     | Three short vibe pulses                          |
| Booting/Shutting Down [LED]        | ▶     | Flashed until ready                              |
| Discovering                        | ▶▶▶   | Flashes three times slowly                       |
| Recording[Vibe]                    | ▶     | One vibe before and two after recording          |
| Recording[LED]                     | ▶     |  |
| Recording [LED] low memory [<2gb]  | ▶     | Two blinks                                       |
| Recording [LED] no memory [<100mb] | ▶     | Continuous flashing                              |
| Low Battery [<30%]                 | ▶     | Continuous flashing                              |
| Firmware Update                    | ▶     | Continuous flashing                              |
| Factory Reset                      | ▶▶    | Continuous flashing [yellow] then booting [blue] |
| Warning/Errors                     | ▷     | Blinking   |
| Unable to Reboot [Error Related]   | ▷     | Flashing [five seconds]                          |
| UMS                                | ▶     |  |
| Reformat Storage                   | ▶▶    | Continuous flashing [yellow] then booting blue   |